
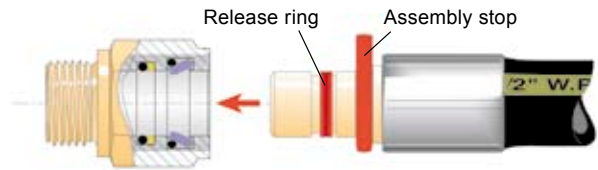


# Connection

1. Make sure the assembly stop is in place and the release ring runs freely in its groove.

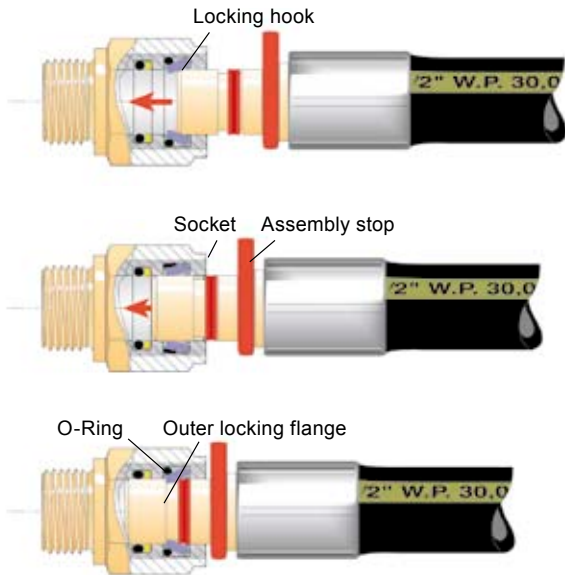


2. The plug is pushed into the socket so that the locking hooks are pressed outwards.

3. Push the plug all the way in until the assembly stop touches the socket.

4. The O-ring presses the locking hooks inwards so that they grip the outer locking flange on the plug. The coupling is now locked and cannot be disconnected.

# Disconnection

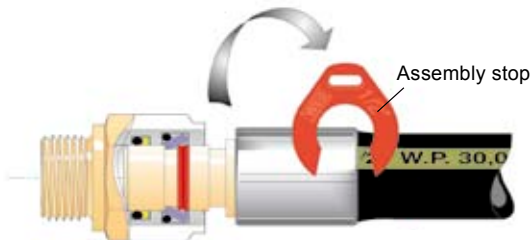

2. Push the plug all the way in so that the release ring pushes the locking hooks aside.

3. Pull the plug out so that its outer flange connects with the release ring and draws it backwards, preventing the hooks from locking and allowing the plug to be fully withdrawn.

1. Using a screwdriver, remove the assembly stop.

